

TB247 (Rev1) - Increasing Font size for 10.4 Screens running 2.6X software

Purpose: 2.6X software the font size became a little smaller and some people find it hard to read. This document will explain how to increase the font size to make it easier to read.

Instructions

1. From the main screen press **Alt+F6** to bring up a Linux prompt. Then type: **edit /etc/X11/Xresources** (press enter). Make sure the "X"s are upper case.
2. Find the line `Xft.dpi : 94` and change the 94 to 106. Press **F1-File**, select **Save**, then press **F10-Exit**. Type: **exit** (press enter) to close the Linux Prompt and then power cycle the control.
3. When the system comes back up, you should notice the font is larger making it easier to read.

Document History

Rev1 Created on 2011-06-08 by #240