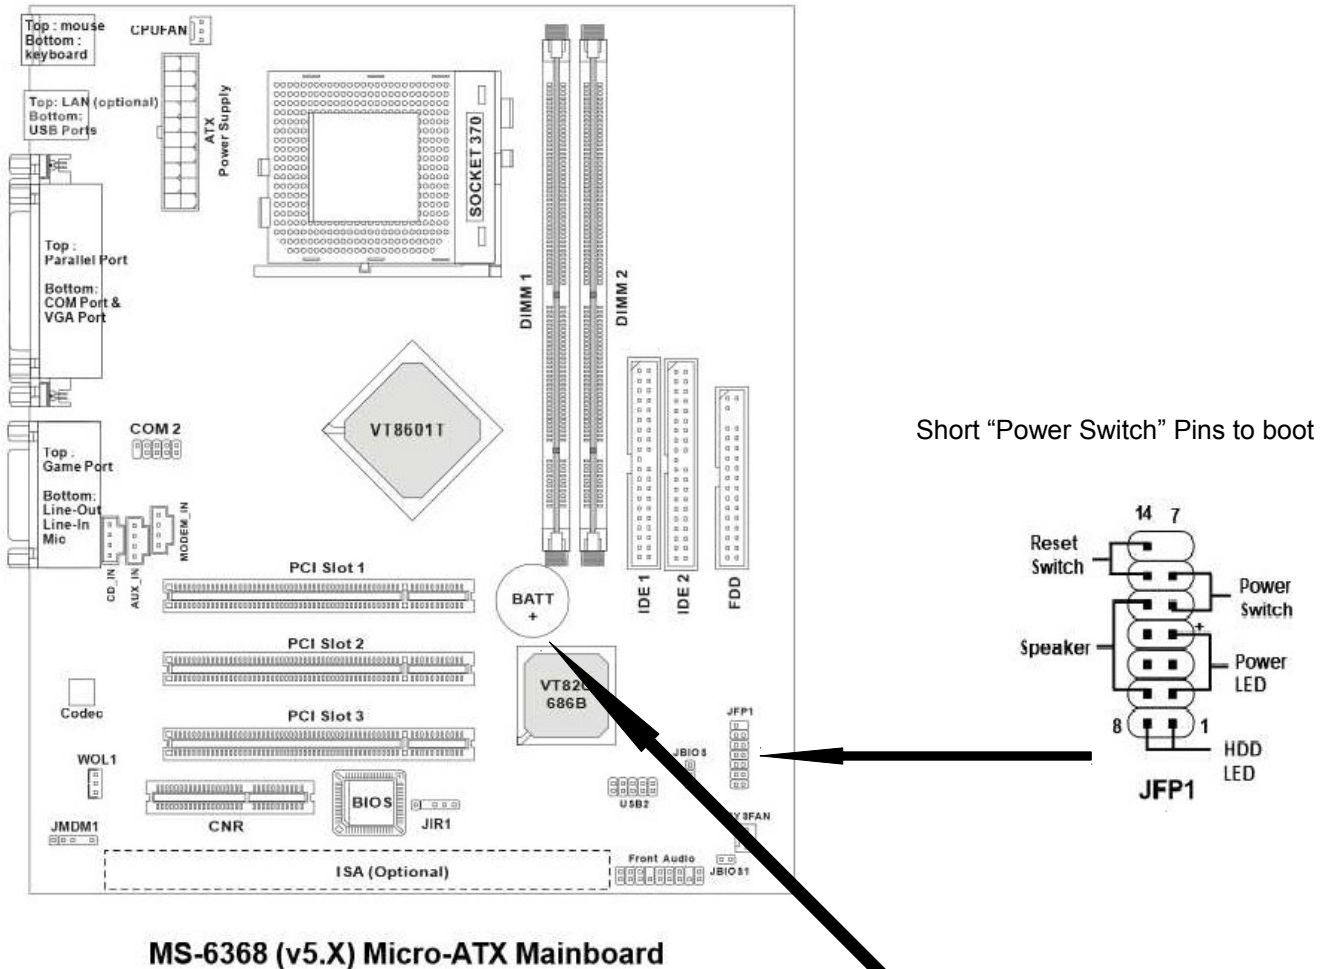# TB276 (Rev1) – Booting and Battery Replacement MSI MS-6368

1. **Replace Battery (CR2032)**

2. **Boot by shorting pins as shown below.**

3. **Watch Screen during Boot To note which key allows you enter enter Setup (Usually "delete" or "F10") and press that key to enter Setup. If you don't catch it fast enough, power off and then power back up.**

4. **Change and Save CMOS Settings as shown below.**

Short "Power Switch" Pins to boot

MS-6368 (v5.X) Micro-ATX Mainboard

CR2032 Battery

BIOS Settings:

1. Select "Power Management"

2. Select "State After Power Failure

3. Set to "On"

4. F10 -Save and Exit

Document History