


TB287 (Rev1) Booting and Battery Replacement MSI K9VGM-V

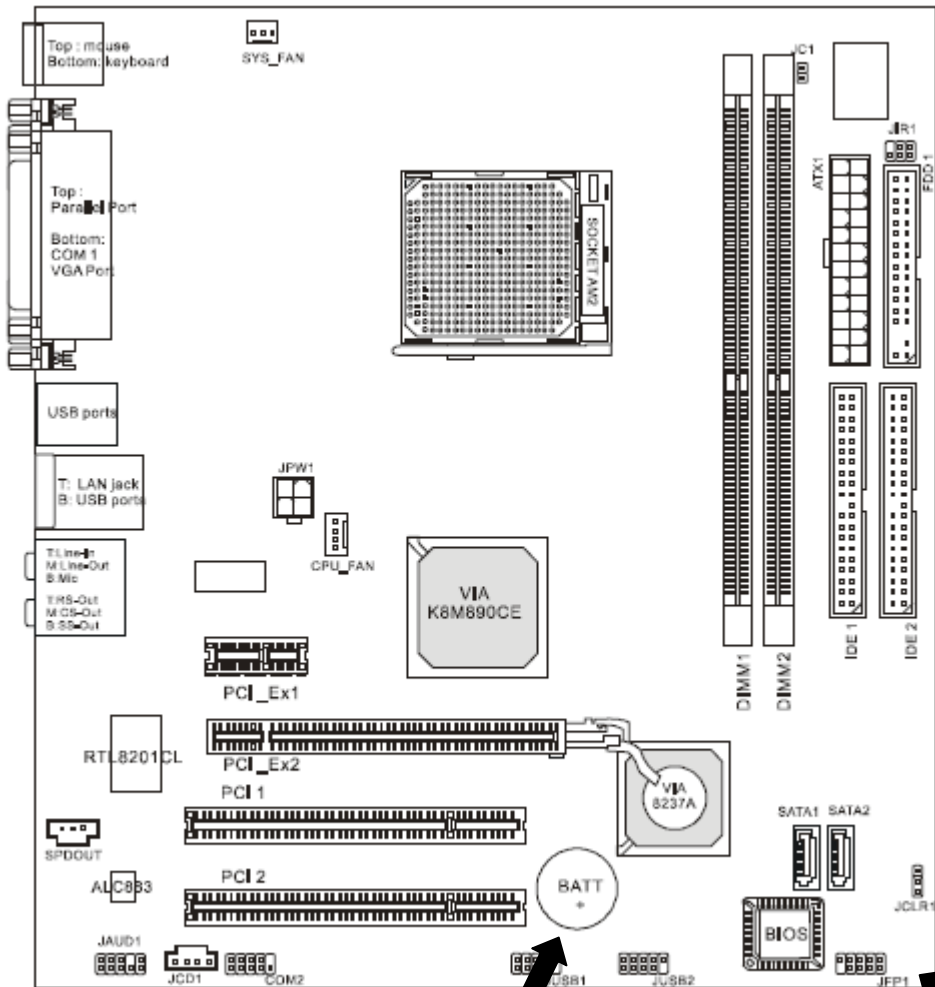


Replace Battery (CR2032)

JFP1

MSI K9VGM-V – CMOS/BIOS Settings

On Boot, press the “delete” key to enter BIOS settings. Then set the following:

1. Set correct Date and Time
2. Under **“Advanced BIOS Features”**
 1st Boot Device: IDE0
 2nd Boot Device: Floppy
 3rd Boot Device: Disabled
3. Under **“Integrated Peripherals”**
 AC97 Controller: Disabled
4. Under **“Power Management Setup”**
 Restore after AC Power Loss: ON

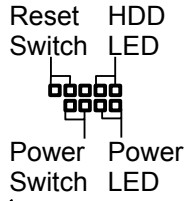

Use a screwdriver to short the “Power Switch” pins on JFP1 to manually boot the mother board